

No. A1521 (100 – 120V)

No. A1522 (220 – 240V)

Heating element for HAKKO FR-801

⚠ WARNING

- When replacing the heating element, be sure to unplug the power cord.
- Wait for the handpiece to cool before working.

How to replace the heating element

1. Move the tube away from the handpiece, as shown. (Figure 1)
2. Remove the 3 screws holding the handpiece together.
3. Open the handpiece. While disconnect the ground terminal and pipe from the protruding portion of the handle, remove the pipe.

⚠ CAUTION

Quartz glass and heat insulation are inside the pipe. Be careful not to drop or loss these items.

4. Disconnect the connector and remove the heating element. (Figure 2)

⚠ CAUTION

- Handle the heating element with care.
- Never rub the heating element wire!
- Insert the handle's projection into the hole in the pipe.

5. Insert a new heating element and reconnect the terminal.
Assemble the handle in the reverse order of disassemble.

⚠ CAUTION

Do not tighten up the screws too much when assembling. This will damage the handpiece.

