

## Hakko FX888D temperature setting adjustments:

To change the set temperature of the tip:

- 1) Press and hold the RH **“Enter”** button for at least one second, then first temperature digit will begin to flash.
- 2) Press the LH **“UP”** button once to increase the first number. Continue to press till the correct number is displayed.
- 3) To get a lower number keep pressing the **“UP”** button until the correct number is displayed.
- 4) Then push the **“Enter”** button once, so the second digit will flash.
- 5) If you want to change the second number press the **“LH”** button to increase the number- as above
- 6) Push **“Enter”** and the third digit will flash.
- 7) If you want to change the third digit, push the **“UP”** button as above and the number will increase.
- 8) Push **“Enter”** and the unit will operate ant the new set temperature.

IF the words **“Adj”** appear on the screen or there are two flashing dots between the digits you are in the wrong menu to adjust the tip temp. Turn the unit off and start again.